



Manufacturer's name: **Yantai Lisong Safety Technology Co., Ltd.**
Address: Building 2, Huari Industrial Park, No. 16, Hongkong Road, Yantai Economic and Technological Development Zone, Yantai City, Shandong Province, China
Date: 28.03.2020
CCQS Project Reference: CE-PC-200308-022

Confirmation Letter

To whom it may concern:

This is to confirm that **Yantai Lisong Safety Technology Co., Ltd.**, Address: **Building 2, Huari Industrial Park, No. 16, Hongkong Road, Yantai Economic and Technological Development Zone, Yantai City, Shandong Province, China** has entered into the service agreement **CE-PC-200308-022** with CCQS Certification Services Limited, with regards to the application of Module B EU Type Examination Certification and Module D Production Monitoring for **Particle filtering half mask, Model: 1206** within the scope of Personal Protective Equipment Regulation (EU) 2016/425 Category III.


If in any doubt about the integrity of this letter, please contact CCQS by email to verify.

Yours Faithfully.



CCQS Certification Services Limited
Block1, Blanchardstown Corporate Park, Ballycoolin Rd.,
Blanchardstown, Dublin 15, D15 AKK1 Ireland
Tel: +353 (0) 1 588 6920
Email info@ccqs.co.ie
Registered in Ireland as a Limited Company No.623897

Approved by
Ireland Government
as a Notified Body for
CE Marking No.2834

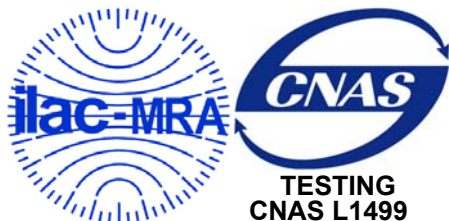

**National Quality Supervision and
Testing Center for Personal
Protective Equipment (Beijing)**

No.55 Taoranting Street, Xicheng District,
Beijing, China.

Phone: +86 10 63519250 +86 10 6352077
+86 10 83530311

Fax: +86 10 63519250 +86 10 63520770

The Testing Center is accredited for compliance with ISO/IEC 17025.

The results of tests, calibrations and/or measurements included in this document are traceable to Chinese/national standards.

CNAS is a signatory to the ILAC mutual recognition arrangement for the mutual recognition of the equivalence of testing, calibration and inspection reports.

TEST REPORT

Particulate respirator-half facepiece

**EN 149: 2001 +A1: 2009 Respiratory protective devices — Filtering half masks to protect against particles —
Requirements, testing, marking**

Product: Filtering half mask
Report No: 2020 (D) - 0009
Client: CCQS Certification Services Limited
Model (s): 1206
Date(s) of tests: 2020.03.18-2020.04.13

DESCRIPTION OF SAMPLES

General Information	Classification	Main Components
Manufacturer	FFP2 NR	White folding mask
Manufacturer Address	Yantai lisong safety technology Co., Ltd. Building2, Huari Industrial Park, No.16, Hongkong Road, Yantai Economic and Technological Development zone, Yantai City, Shandong Province, China	

Signed:

Issued: 2020.4.14

陈倬为 Chen Zhuowei
Authorized Signatory, Lab Director

Page 1 of 10

This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.



Conditions:

The test results presented in this report relate to the samples tested only.

This report may be reproduced and distributed to your clients, provided that it is reproduced and distributed in full.

The authenticity of this test report and its contents can be verified by contacting the laboratory.

Test Results

<p>7.3 Visual inspection</p> <p>The visual inspection shall include the marking and information supplied by the manufacturer. Note1: As requested by the client, marking and information supplied by the manufacturer was not inspected.</p>	Not tested¹				
<p>7.4 Package</p> <p>Particle filtering half masks shall be offered for sale packaged in such a way that they are protected against mechanical damage and contamination before use. Note2: In accordance with the requirement.</p>	Pass²				
<p>7.5 Material</p> <p>Materials used shall be suitable to withstand handling and wear over the period for which the particle filtering half mask is designed to be used.</p> <p>Any material from the filter media released by the air flow through the filter shall not constitute a hazard or nuisance for the wearer.</p> <p>After undergoing the conditioning described in 8.3.1 none of the particle filtering half masks shall have suffered mechanical failure of the facepiece or straps.</p> <p>When conditioned in accordance with 8.3.1 and 8.3.2 the particle filtering half mask shall not collapse. Note3: No mechanical failure after undergoing the conditioning described in 8.3.1. No collapse when conditioned in accordance with 8.3.1 and 8.3.2.</p>	Pass³				
<p>7.6 Cleaning and disinfecting</p> <p>If the particle filtering half mask is designed to be re-usable, the materials used shall withstand the cleaning and disinfecting agents and procedures to be specified by the manufacturer. Note4: Single shift use only.</p>	N/A⁴				
<p>7.7 Practical performance</p> <p>The particle filtering half mask shall undergo practical performance tests under realistic conditions. Note5: No imperfections.</p>	Pass⁵				
<p>7.8 Finish of parts</p> <p>Parts of the device likely to come into contact with the wearer shall have no sharp edges or burrs. Note6: No sharp edges or burrs.</p>	Pass⁶				
<p>7.9.1 Total inward leakage</p> <p>For particle filtering half masks fitted in accordance with the manufacturer's information, at least 46 out of the 50 individual exercise results (i.e. 10 subjects x 5 exercises) for total inward leakage shall be not greater than: 25% for FFP1, 11% for FFP2, 5% for FFP3</p> <p>and, in addition, at least 8 out of the 10 individual wearer arithmetic means for the total inward leakage shall be not greater than 22% for FFP1, 8% for FFP2, 2% for FFP3 Note7: FFP2 respirator. Test results are shown in Annex A Table 7.9.1-A&B.</p>	Pass⁷				
<p>7.9.2 Penetration of filter material</p> <p>The penetration of the filter of the particle filtering half mask shall meet the requirements of Table 1.</p> <table border="0" style="width: 100%; margin-left: 40px;"> <tr> <td style="width: 50%;">Sodium chloride test 95 l/min</td> <td style="width: 50%;">Paraffin oil test 95 l/min</td> </tr> <tr> <td>FFP1 ≤20%</td> <td> ≤20%</td> </tr> </table>	Sodium chloride test 95 l/min	Paraffin oil test 95 l/min	FFP1 ≤20%	≤20%	Pass⁸
Sodium chloride test 95 l/min	Paraffin oil test 95 l/min				
FFP1 ≤20%	≤20%				
<p>This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.</p>					

FFP2	≤6%	≤6%
FFP3	≤1%	≤1%

Note8: FFP2 respirator. Test results are shown in Annex A Table 7.9.2.

7.10 Compatibility with skin

Pass⁹

Materials that may come into contact with the wearer’s skin shall not be known to be likely to cause irritation or any other adverse effect to health.

Note9: No irritation or any other adverse effect to health.

7.11 Flammability

Pass¹⁰

When tested, the particle filtering half mask shall not burn or not to continue to burn for more than 5 s after removal from the flame.

Note10: Test results are shown in Annex A Table 7.11.

7.12 Carbon dioxide content of the inhalation air

Pass¹¹

The carbon dioxide content of the inhalation air (dead space) shall not exceed an average of 1,0 % (by volume)

Note11: Test results are shown in Annex A Table 7.12.

7.13 Head harness

Pass¹²

The head harness shall be designed so that the particle filtering half mask can be donned and removed easily. The head harness shall be adjustable or self-adjusting and shall be sufficiently robust to hold the particle filtering half mask firmly in position and be capable of maintaining total inward leakage requirements for the device.

Note12: Head harness can be donned and removed easily, adjustable or self-adjusting and have sufficiently robust to hold the particle filtering half mask firmly.

7.14 Field of vision

Pass¹³

The field of vision is acceptable if determined so in practical performance tests.

Note13: Pass the practical performance tests.

7.15 Exhalation valve

N/A¹⁴

A particle filtering half mask may have one or more exhalation valve(s), which shall function correctly in all orientations.

If an exhalation valve is provided it shall be protected against or be resistant to dirt and mechanical damage and may be shrouded or may include any other device that may be necessary for the particle filtering half mask to comply with 7.9.

Exhalation valve(s), if fitted, shall continue to operate correctly after a continuous exhalation flow of 300 l/min over a period of 30 s.

When the exhalation valve housing is attached to the faceblank, it shall withstand axially a tensile force of 10 N applied for 10 s.

Note14: No exhalation valve.

7.16 Breathing resistance

Pass¹⁵

Classification	Maximum permitted resistance (mbar)		
	Inhalation		Exhalation
	30 l/min	95 l/min	160 l/min
FFP1	0.6	2.1	3.0
FFP2	0.7	2.4	3.0
FFP3	1.0	3.0	3.0

Note15: FFP2 respirator. Test results are shown in Annex A Table 7.16.

This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.

7.17 CloggingN/A¹⁶**7.17.2 Breathing resistance**

Valved particle filtering half masks:

After clogging the inhalation resistances shall not exceed:

FFP1: 4 mbar, FFP2: 5 mbar, FFP3: 7 mbar at 95L/min continuous flow

The exhalation resistance shall not exceed 3 mbar at 160 L/min continuous flow

Valveless particle filtering half masks

After clogging the inhalation and exhalation resistances shall not exceed:

FFP1: 3 mbar, FFP2: 4 mbar, FFP3: 5 mbar at 95L/min continuous flow

7.17.3 Penetration of filter material

	Sodium chloride test 95 l/min	Paraffin oil test 95 l/min
FFP1	≤20%	≤20%
FFP2	≤6%	≤6%
FFP3	≤1%	≤1%

Note16: Single shift use only.

7.18 Demountable partsN/A¹⁷

All demountable parts (if fitted) shall be readily connected and secured, where possible by hand

Note17: No demountable parts.

9 Marking

Not tested

9.1 Packaging

The following information shall be clearly and durably marked on the smallest commercially available packaging or legible through it if the packaging is transparent.

9.1.1 The name, trademark or other means of identification of the manufacturer or supplier.

9.1.2 Type-identifying marking.

9.1.3 Classification

The appropriate class (FFP1, FFP2 or FFP3) followed by a single space and then: "NR" if the particle filtering half mask is limited to single shift use only. Example: FFP3 NR, or "R" if the particle filtering half mask is re-usable. Example: FFP2 R D.

9.1.4 The number and year of publication of this European Standard.

9.1.5 At least the year of end of shelf life. The end of shelf life may be informed by a pictogram as shown in Figure 12a, where yyyy/mm indicates the year and month.

9.1.6 The sentence 'see information supplied by the manufacturer', at least in the official language(s) of the country of destination, or by using the pictogram as shown in Figure 12b.

9.1.7 The manufacturer's recommended conditions of storage (at least the temperature and humidity) or equivalent pictogram, as shown in Figures 12c and 12d.

9.1.8 The packaging of those particle filtering half masks passing the dolomite clogging test shall be additionally marked with the letter "D". This letter shall follow the classification marking preceded by a single space.

9.2 Particle filtering half mask

Particle filtering half masks complying with this European Standard shall be clearly and durably marked with the following:

9.2.1 The name, trademark or other means of identification of the manufacturer or supplier.

This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.

9.2.2 Type-identifying marking.

9.2.3 The number and year of publication of this European Standard.

9.2.4 Classification

The appropriate class (FFP1, FFP2 or FFP3) followed by a single space and then: "NR" if the particle filtering half mask is limited to single shift use only. Example: FFP3 NR, or "R" if the particle filtering half mask is re-usable. Example: FFP2 R D.

9.2.5 If appropriate the letter D (dolomite) in accordance with clogging performance. This letter shall follow the classification marking preceded by a single space

9.2.6 Sub-assemblies and components with considerable bearing on safety shall be marked so that they can be identified.

End of Test Results

Annex A: Summarization of Test Data**Table 7.9.1-A Inward leakage test data**

Test specification: EN 149-2001 Clause 8.5

Subject	Sample No.	Condition	Walk(%)	Head Side/side(%)	Head up/down(%)	Talk(%)	Walk(%)	Mean(%)
Yi	1	A.R.	5.21	5.33	5.48	5.32	5.25	5.3
Gong	2	A.R.	5.63	5.74	5.87	5.73	5.62	5.7
Yu	3	A.R.	5.91	6.07	6.19	6.06	5.92	6.0
Zhi	4	A.R.	5.71	5.85	5.91	5.81	5.74	5.8
Fang	5	A.R.	4.84	4.92	5.04	5.05	4.91	5.0
Hu	6	T.C.	5.13	5.26	5.43	5.12	5.13	5.2
Xu	7	T.C.	5.48	5.59	5.68	5.56	5.47	5.6
Deng	8	T.C.	6.32	6.47	6.52	6.49	6.33	6.4
Zhang	9	T.C.	6.76	6.83	6.99	6.87	6.73	6.8
Zhou	10	T.C.	6.97	7.09	7.18	7.01	6.98	7.0
50 out of the 50 individual exercise results \leq 11 % 10 of the 10 individual arithmetic means \leq 8 %					Pass			

Table 7.9.1-B Facial dimension

Subject	Face length	Face Width	Face Depth	Mouth Width
Yi	120	130	109	59
Gong	122	140	115	65
Yu	119	160	139	55
Hu	112	122	119	63
Xu	110	130	118	60
Deng	115	119	110	59
Zhang	112	123	113	55
Liu	103	130	100	50
Zhi	118	139	130	63
Fang	115	129	120	50
Chen	116	150	132	56
Zhou	110	121	110	53

This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.

Table -7.9.2 Penetration of filter material

Test specification: EN 149-2001 Clause 8.11

Aerosol	Condition	Sample No.	Penetration (%)	Assessment
Sodium chloride test	As received	11	0.614	Pass
		12	0.621	
		13	0.785	
	Simulated wearing treatment	14	0.636	
		15	0.672	
		16	0.798	
	Mechanical strength+ Temperature conditioned	17	0.773	
		18	0.694	
		19	0.731	
Paraffin oil test	As received	20	4.61	
		21	4.24	
		22	4.37	
	Simulated wearing treatment	23	4.79	
		24	5.63	
		25	5.28	
	Mechanical strength+ Temperature conditioned	26	4.87	
		27	5.37	
		28	4.93	
Flow conditioning: Single filter: 95.0 L/min				

Table 7.11 Flammability

Test specification: EN 149-2001 Clause 8.6

Condition	Sample No.	Result	Assessment
As received	29	Burn for 2 s	Pass
	30	Burn for 2 s	
Temperature conditioned	31	Burn for 3 s	
	32	Burn for 2 s	

This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.

Table 7.12 Carbon dioxide content of the inhalation air

Test specification: EN 149-2001 Clause 8.7

Condition	Sample No.	Result	Assessment
As received	33	0.41%	Mean value 0.4%
	34	0.40%	
	35	0.41%	

Table 7.16 Breathing resistance (mbar)

Test specification: EN 149-2001 Clause 8.9

	Flow rate		36					37					38				
			A	B	C	D	E	A	B	C	D	E	A	B	C	D	E
As received	Inhalation	30 l/min	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4
		95 l/min	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6
	Exhalation	160 l/min	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4
Simulated wearing treatment	Inhalation	30 l/min	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4
		95 l/min	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6
	Exhalation	160 l/min	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4
Temperature conditioned	Inhalation	30 l/min	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4
		95 l/min	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6
	Exhalation	160 l/min	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4
Flow conditioned	Inhalation	30 l/min	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4	0.4	0.4	0.5	0.4	0.4
		95 l/min	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6	1.6	1.6	1.7	1.6	1.6
	Exhalation	160 l/min	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4	1.4	1.5	1.4	1.4	1.4
Assessment	Pass																

A: facing directly ahead; B: facing vertically upwards; C: facing vertically downwards; D: lying on the left side; E: lying on the right side

End of Annex A

ANNEX B PHOTOS OF SAMPLES



End of Annex B

This report may not be published except in full unless permission for the publication of an approved extract has been obtained in writing.